

■ Flash functions available with cameras when used with an external Speedlight

\*1 Not available with spot metering.

\*2 Can be also selected with flash unit.

\*3 AA/Mode A selection preformed on flash unit using custom settings. Mode A will be selected when a non-CPU lens is used.

\*4 Can only be selected using camera Flash Control option.

\*5 Auto aperture flash mode and non-TTL auto flash mode cannot be selected in the flash unit's custom menu.

Non-TTL auto flash mode will be applied if a non-CPU lens is used without specifying the lens' maximum aperture using **Non-CPU lens data** in the camera's setup menu.

\*6 Available only in i-TTL, AA, A, GN and M.

\*7 Available only in i-TTL, AA and A.

Cannot be configured	—	Not supported by camera
	Text entered	Not supported by camera, but flash functions are indicated
		Function not available with flash unit
Can be configured	O	Available
	Text entered	Available; additional information noted